


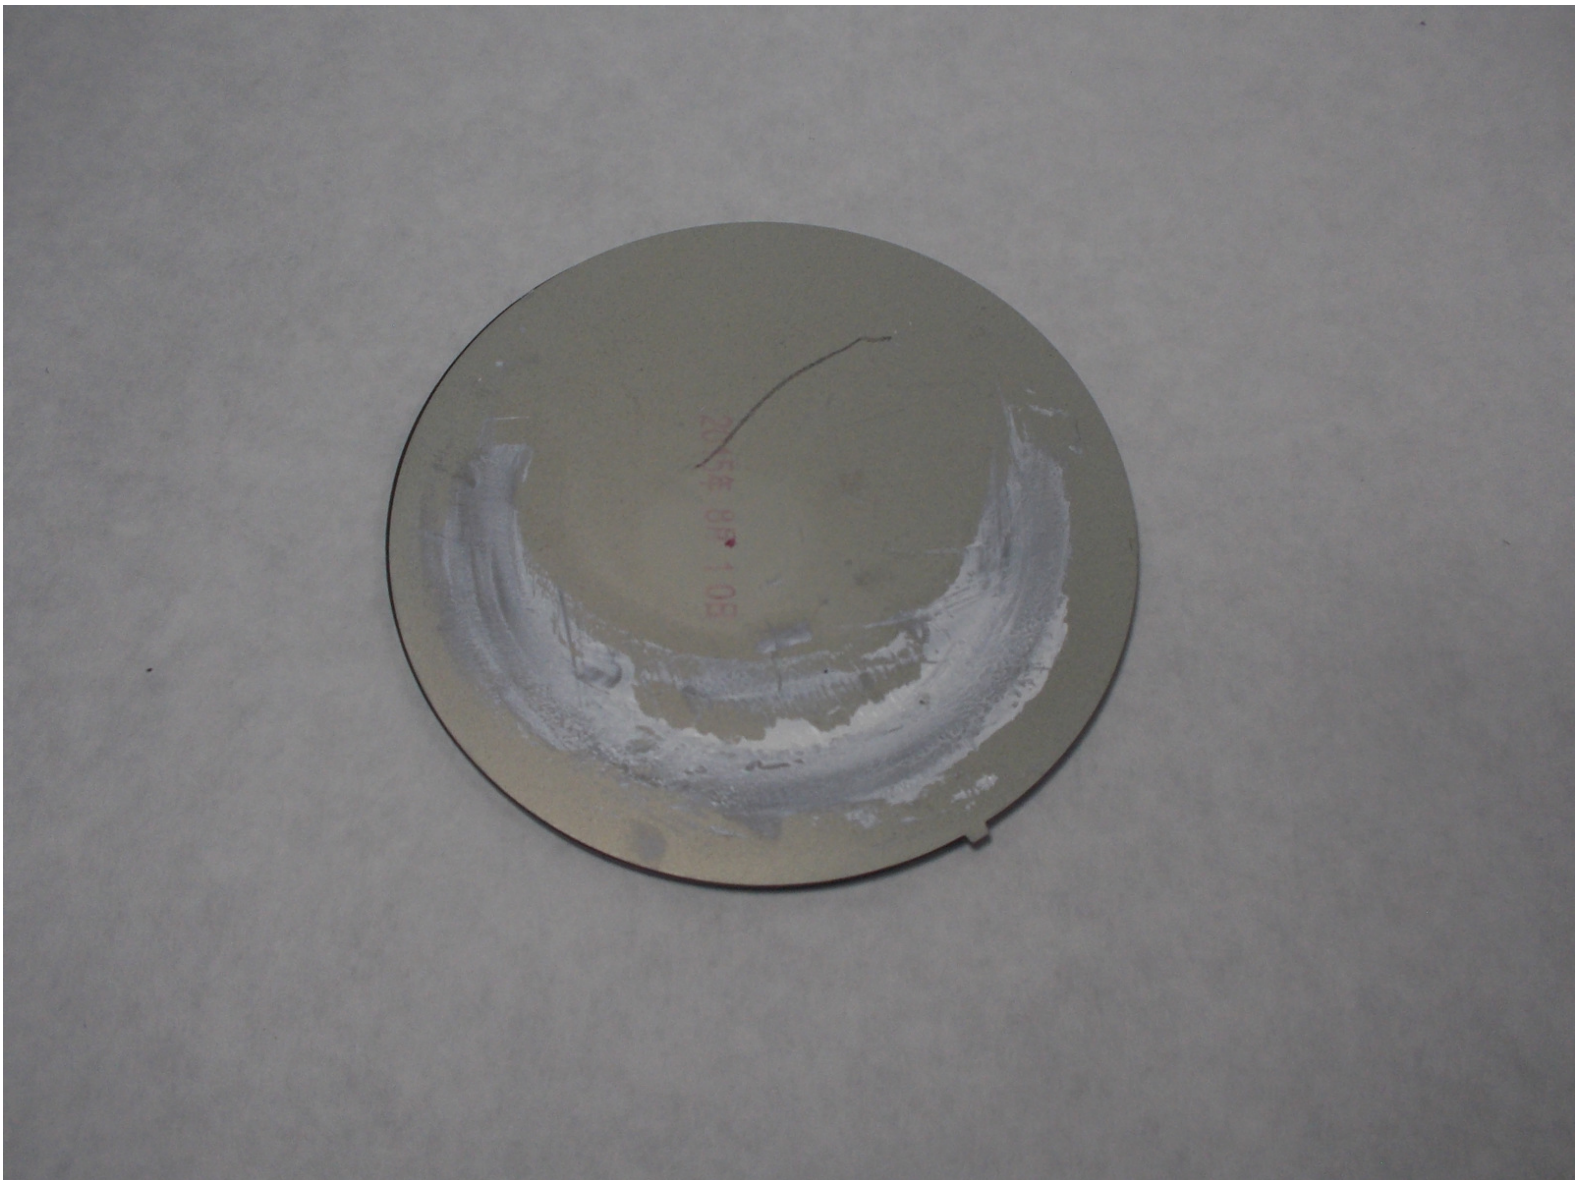


DCC-3200 Cracked hot plate Replacement

This guide will help people replace.

Written By: Hamad Khan




Step 1 — Cracked hot plate

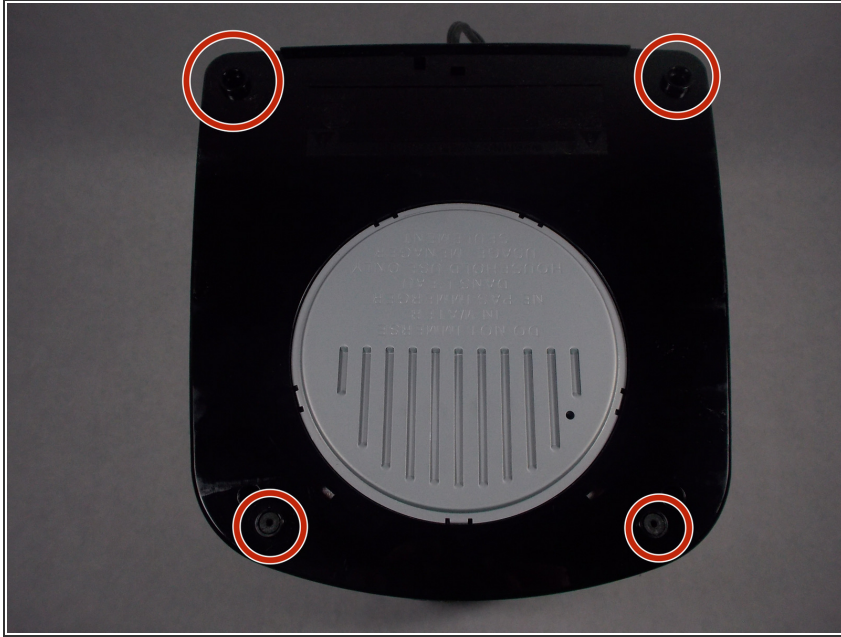



- Make sure it is unplugged.
- Flip it over. Take out the force screws.
- Un-click the power cord from the bottom and set the panel aside.

Step 2

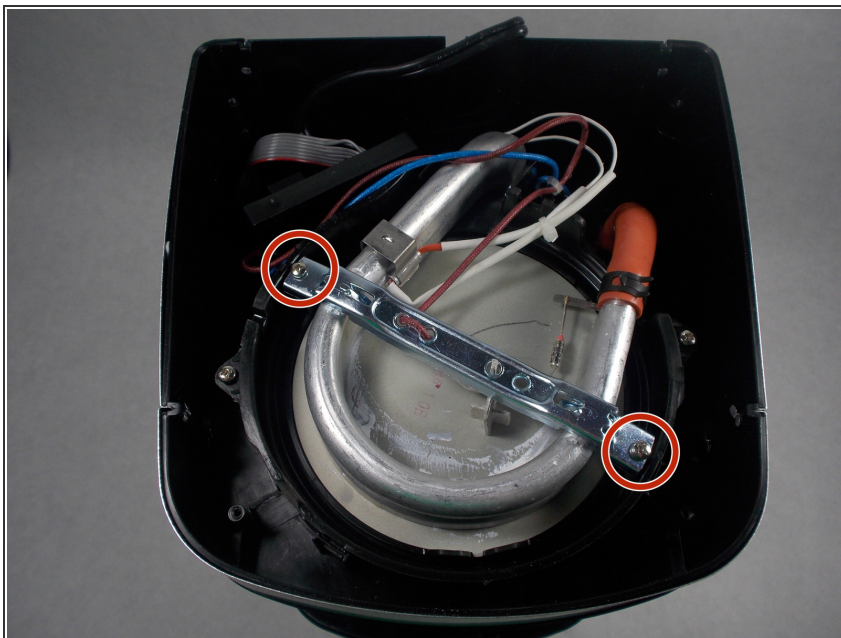


- Unscrew the two screws on the silver brace.
- You will see a black clamp around the tube.

Step 3

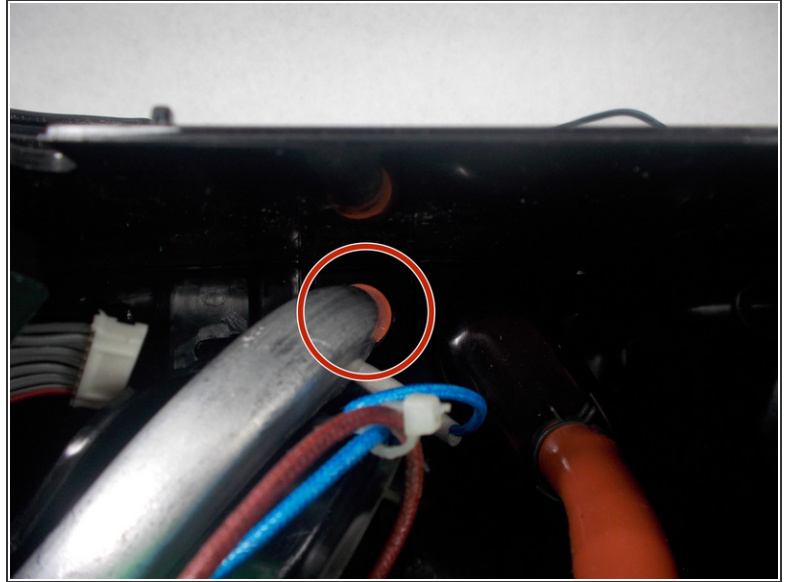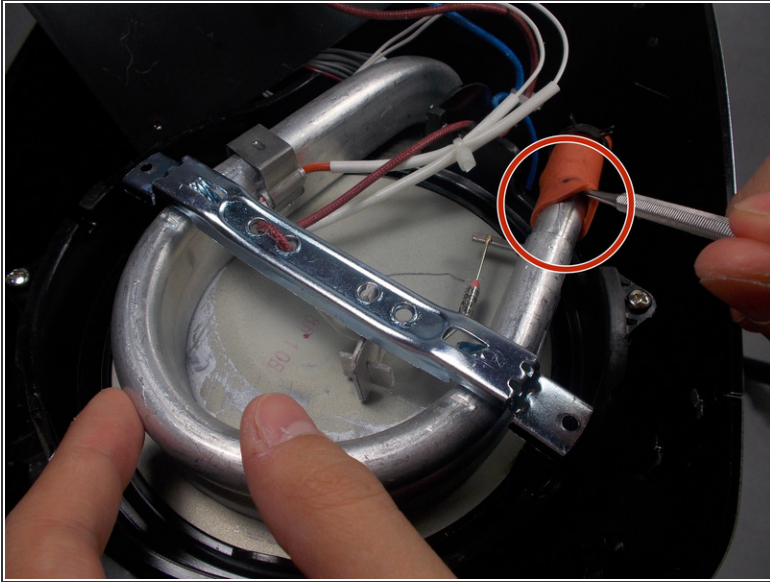

- Please use a flat strong object to wedge the red tube off of the metal.
- Please repeat this for the other side of the silver pipe deeper in the device.

Step 4

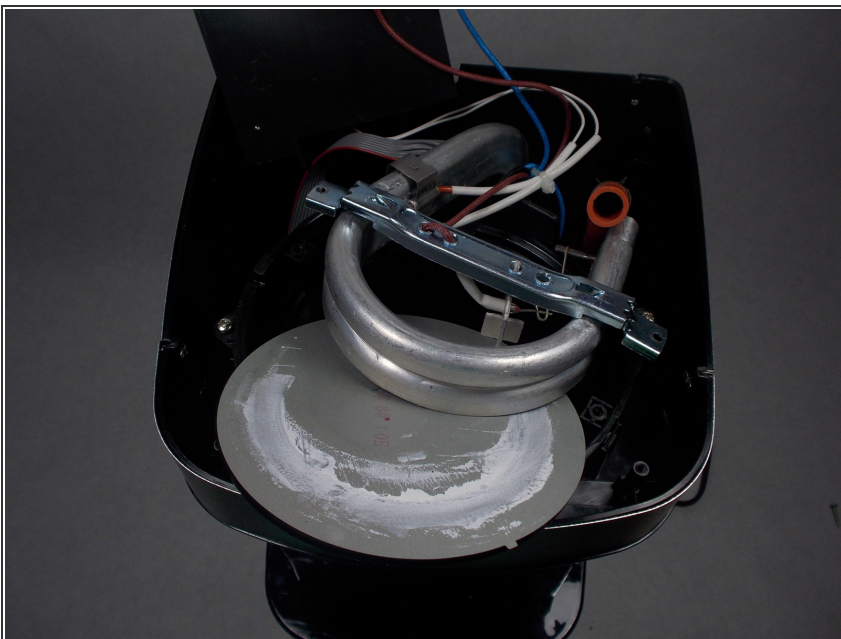

- Once that is finished carefully pick the middle pipe about an inch and attempt to slide the hot plate out of its area.
- Replace new hot plate with new thermal paste.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-07 01:24:00 PM.